



Installation Instructions

For replacement of parts 1 through 8

1. Remove the two Manifold Screws (7)
2. Remove the Manifold (6) from the Pump Body
3. With your thumb, push the Piston Assembly (3) into the Pump Body cylinder. This will compress the Piston Spring (2) and cause the Piston Rod to extend from the back of the Pump Body assembly
4. With the Piston Rod extended, remove the Pump Handle (1)
5. Remove the Piston Assembly (3) from the Pump Body cylinder
6. Clean and lightly lubricate* the inside of the Pump Body cylinder
7. Install and lightly lubricate the new Piston Seal (4) onto the new Piston Assembly (3)
8. Assemble new Piston Spring (2) onto new Piston Assembly (3) and install into Pump Body cylinder
9. With your thumb, push the Piston Assembly (3) into the Pump Body cylinder. This will compress the Piston Spring (2) and cause the Piston Rod to extend from the back of the Pump Body assembly
10. Assemble the pump handle (1) onto the Piston Rod end
11. Install the new O-ring (5) onto the new Manifold (6)
12. Install new Manifold (6) onto the Pump Body using the new Valve Housing Screws (7)
13. Install new Schrader Valve (8) into the new Manifold (6) using the Schrader Valve Tool (14)
14. Remove the Lever Pin Retaining Ring (10), Lever Pin (11), and Lever (9) from the old Manifold (6) and install onto the new Manifold

* Lubricate with Silicone oil.

Americas:
One Lincoln Way
St. Louis, MO 63120-1578
USA
Phone +1.314.679.4200
Fax +1.800.424.5359

Europe /Africa/Middle East
Lincoln GmbH
Heinrich-Hertz-Str. 2-8
69190 Walldorf - Germany
Phone/Fax +49.6227.33-0/-259
www.lincolnindustrial.de

Asia/Pacific:
51 Changi Business Park
Central 2
#09-06 The Signature
Singapore 486066
Phone +65.6588.0188
Fax +65.6588.3438

© Copyright Lincoln Industrial
Corporation 2009
Printed in USA

Web site:
www.lincolnindustrial.com